COOKTOP PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

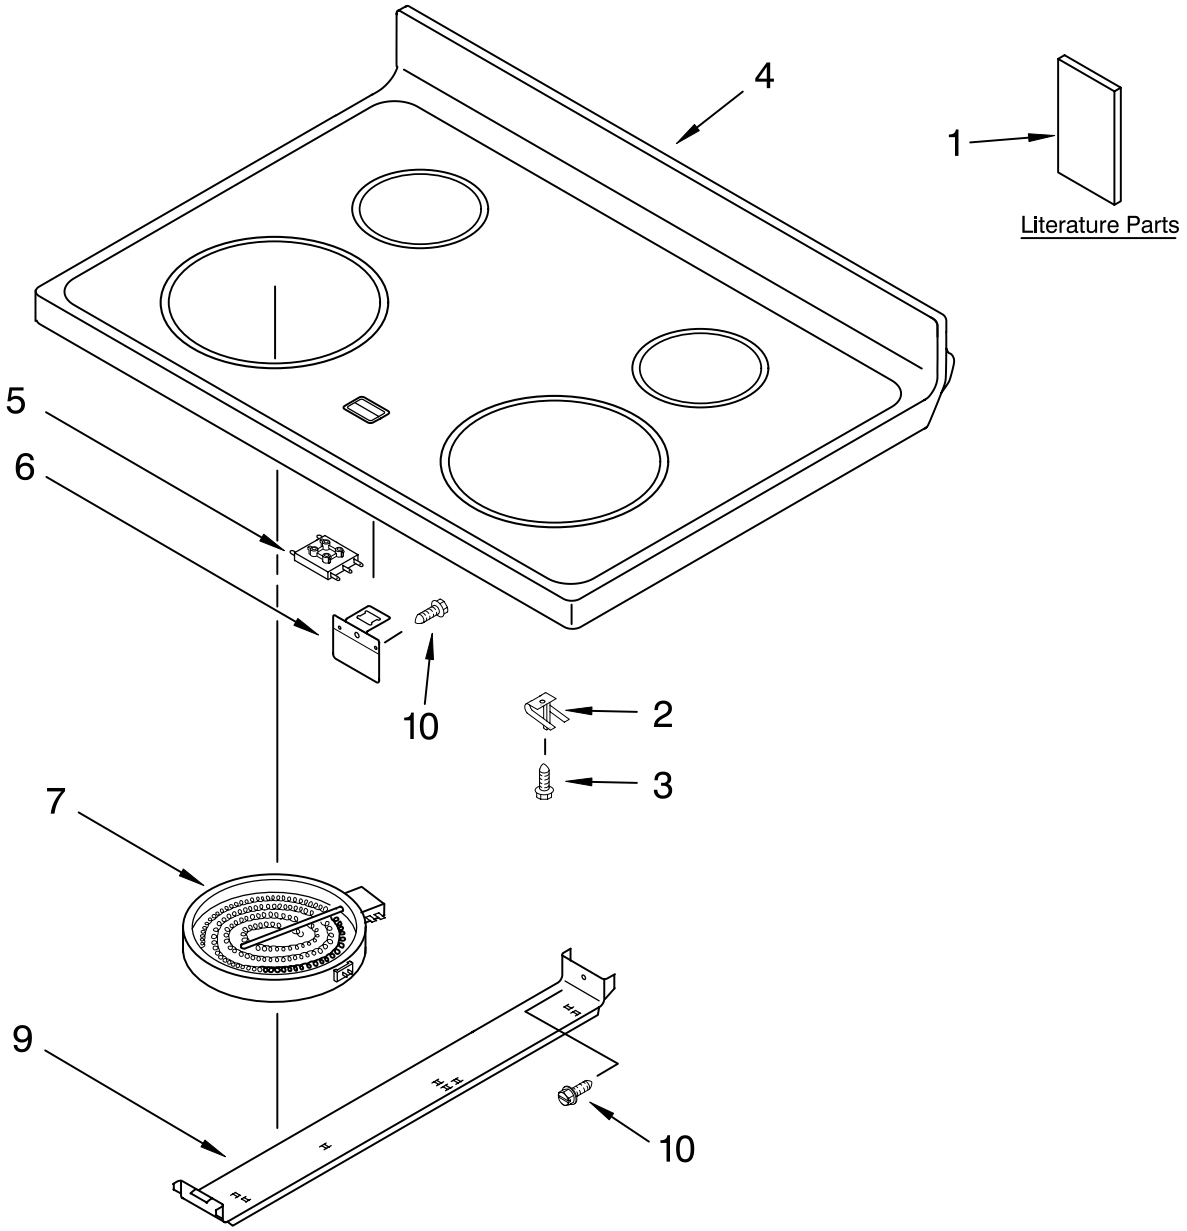

Illus. No.	Part No.	DESCRIPTION
1		Literature
	9759923	Instructions, Installation Template, Anti−Tip
	9757142	English/Spanish
	9757143	English/French
	9761862	Guide, Use & Care
	9759917	Tech Sheet
	3191638	Safer Cooking Tips
2	3149191	Spring, Locator
3	3196170	Screw
4		Cooktop
	9759844	White/White Glass
	9759846	Black/Black Glass
	9759845	Biscuit
5	8523739	Light, Indicator (Hot Surface)
6	8523741	Bracket, Ind Light
7		Element, Surface
	9759351	2400/1200W − LF
	8523698	1200 W − LR
	8523698	1200W − RR
	9759351	2400/1200 W − RF
9	8272791	Bracket, Element
10	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

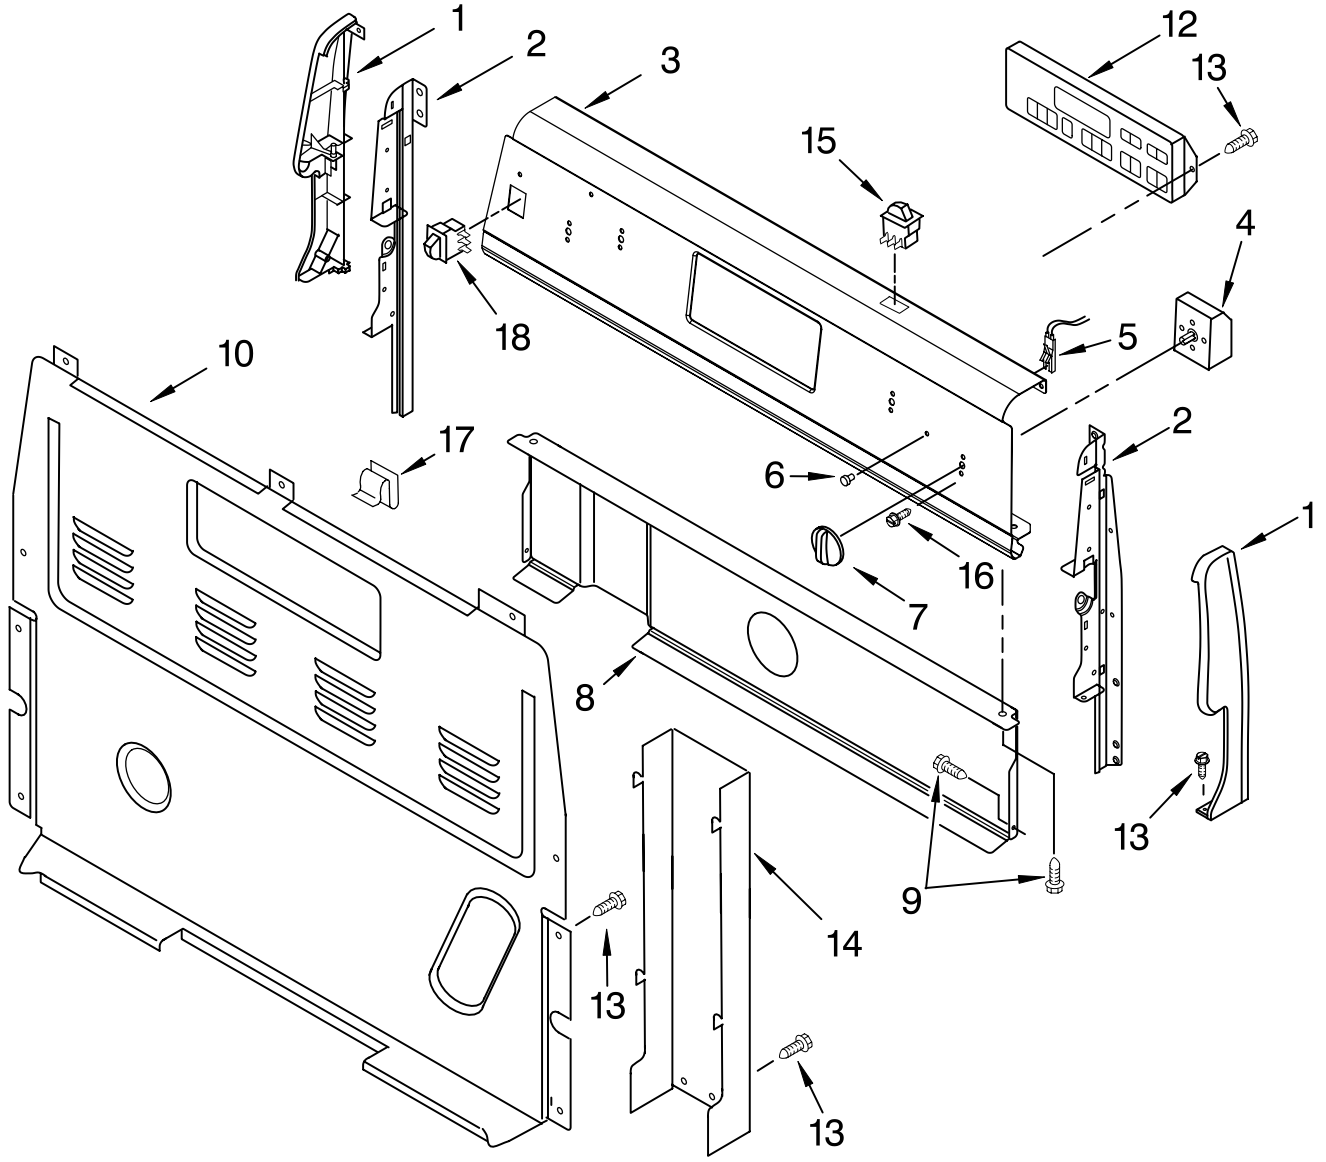

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	3186190	White Left Hand
	3186191	White Right Hand
	3186188	Black Left Hand
	3186189	Black Right Hand
	8272507	Biscuit Left Hand
	8272508	BiscuitRight Hand
2		Support, Endcap
	8523408	Left Hand
	8523409	Right Hand
3		Panel, Backguard
	9759847	White
	9759849	Black
	9759848	Biscuit
	9759850	Stainless

Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	9757030	Left Front
	3148951	Left Rear
	3148951	Right Rear
	9757030	Right Front
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (2)
7		Knob, Infinite (4)
	8522565	White
	8522566	Black
	8522567	Biscuit
8	8523280	Shield, Heat
9	4449746	Screw
10	8272473	Cover, Upper

Illus. No.	Part No.	DESCRIPTION
12		Control, Range
	6610452	White
	6610453	Black
	6610454	Biscuit
13	3196178	Screw
14	9758283	Cover, Box
15		Switch − Rocker
	3149360	White
	3148564	Black
	8273501	Biscuit
16	3400882	Screw
17	8273564	Clip
18		Switch, Accusimmer
	8523715	White
	8523558	Biscuit
	8524090	Black

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

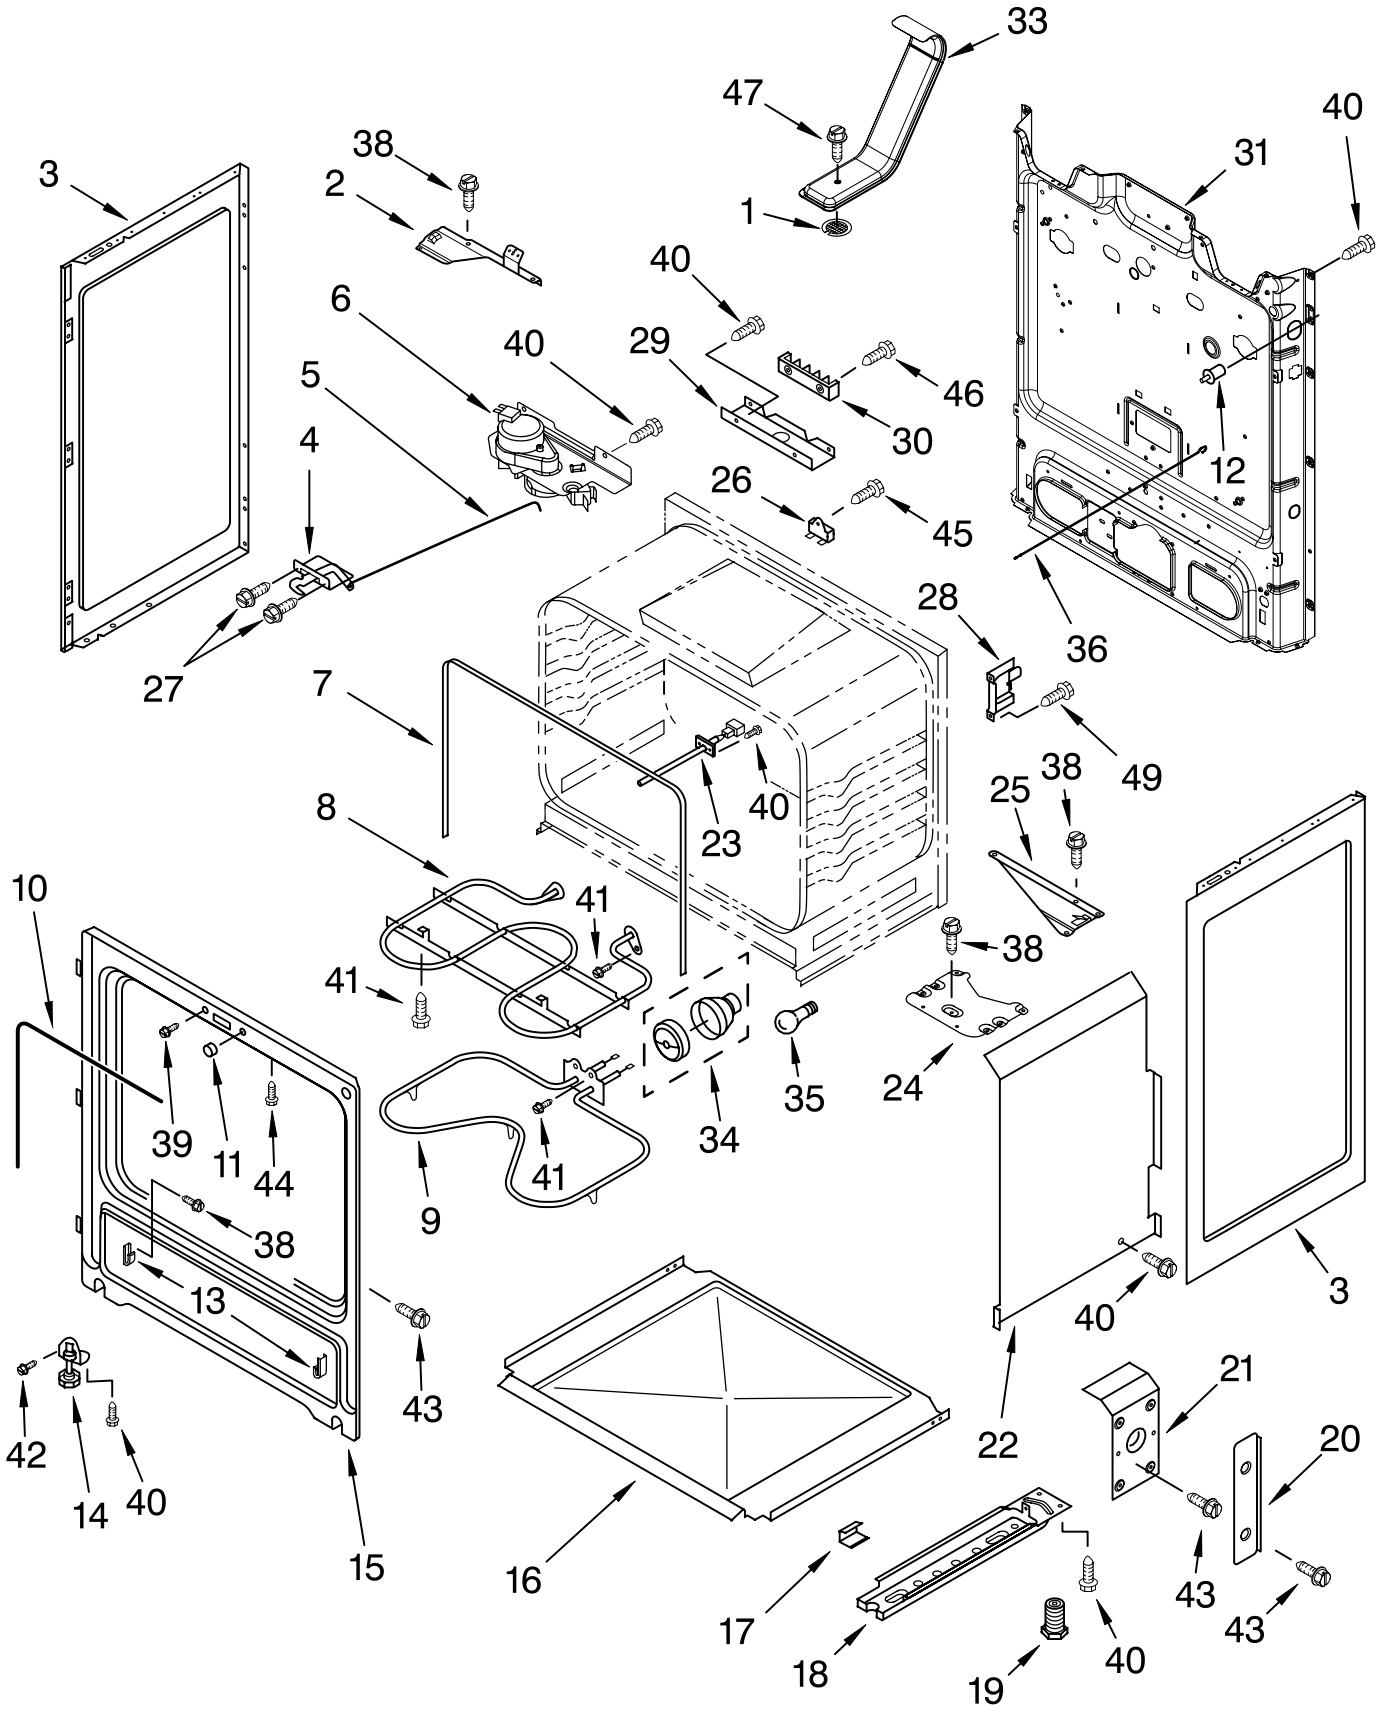

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9758213	Screen − Catalyst
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White−Textured
	8053832	Black−Textured
	8272519	Biscuit−Textured
4	9761013	Latch, Door
5	3196961	Rod, Latch
6	9757242	Latch Asm, Rear
7	3195737	Seal, Oven Flange
8	9757340	Element, Broil
9	9758541	Element, Bake
10	8522416	Seal, Oven Door
11	9758701	Spacer, Door
12	9757238	Switch, Door
13	3195546	Glide, Drawer (2)
14	3196037	Foot, Front (2)
15	9758224	Frame, Front
16	8054068	Tray, Insulation
17	3196576	Clip, Panel (6)
18	9760314	Rail, Base (2)
19	312701	Foot, Rear (2)
20	3196091	Shield, Outer (2)
21	3196092	Shield, Inner (2)
22	8523803	Retainer, Side (2)
23	8273902	Sensor, Oven
24	3195736	Support, Front (2)
25	3195987	Support, Corner RR
26	3196548	Fuse, Thermal
27	3196560	Screw (2)
28	3186116	Support, Oven (2)
29	3186034	Bracket, Service
30	9757136	Block, Terminal
	112432	Nut (3)
31	8274034	Back, Main
33	9758221	Vent Tube Asm
34	3196701	Light Socket Assy
35	311255	Bulb, Oven Light
36	9757239	Rod − Dr Switch
38	3196165	Screw
39	3196168	Screw
40	3196178	Screw
41	3196174	Screw
42	3196179	Screw
43	3196177	Screw
44	3196176	Screw
45	3196172	Screw
46	3400016	Screw
47	3196566	Screw
49	3196169	Screw

INSULATION

	8272616	Insulation, Wrap
	8272612	Insulation, Back
	8272613	Insulation, Vent

DOOR PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

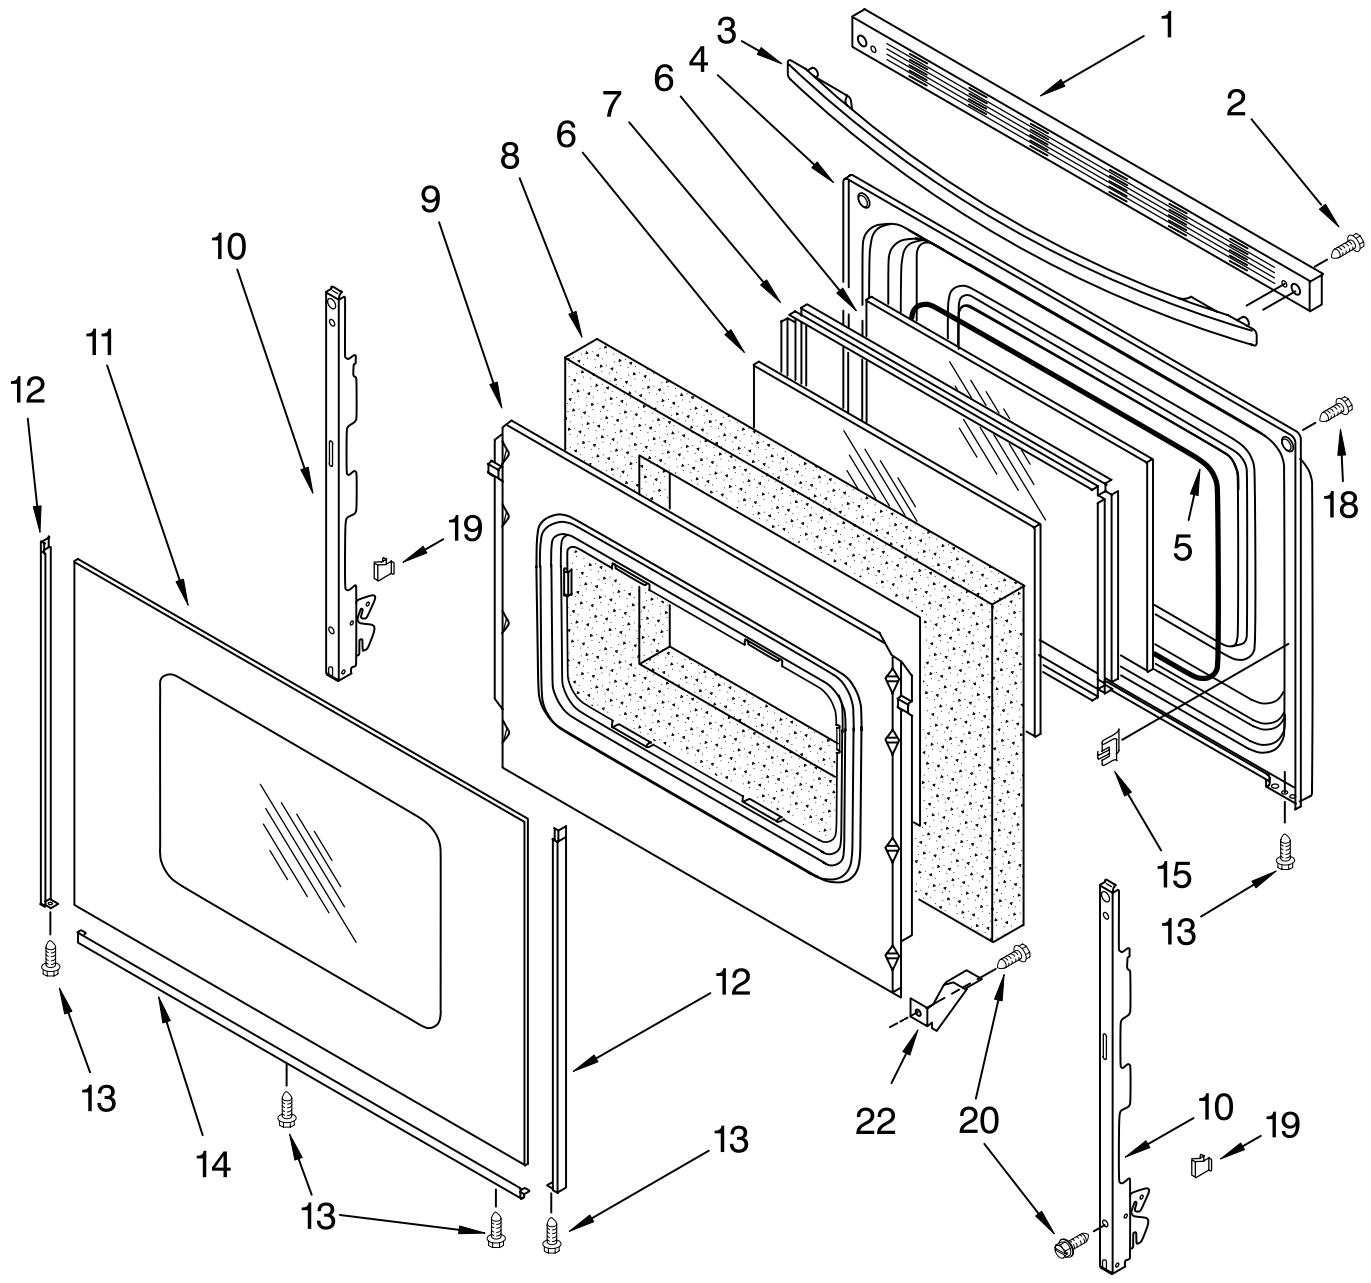

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Trim, Door Top
	8522433	White
	3196819	Black
	8522434	Biscuit
	8272243	Stainless Model
2	3196164	Screw
3		Handle, Door
	8522444	White
	3195922	Black
	8522445	Biscuit
4	3186292	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	3186297	Retainer, Insul.
10	8053807	Hinge, Door (2)
	8272822	Stainless Model
11		Glass, Outer Door
	9756415	White
	9756414	Black
	9756416	Biscuit
	9756435	Black Stainless
12		Trim, Side
	8523172	White Left Hand
	8523166	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523173	Biscuit Left Hand
	8523167	Biscuit Right Hand
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523177	Black
	8523178	Biscuit
	8523180	Stainless Model
15	3196025	Clip, Glass (4)
18	3196161	Screw
19	3196925	Clip, Door Stop
20	3196165	Screw
22	3196794	Bracket, Window(2)

DRAWER & BROILER PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

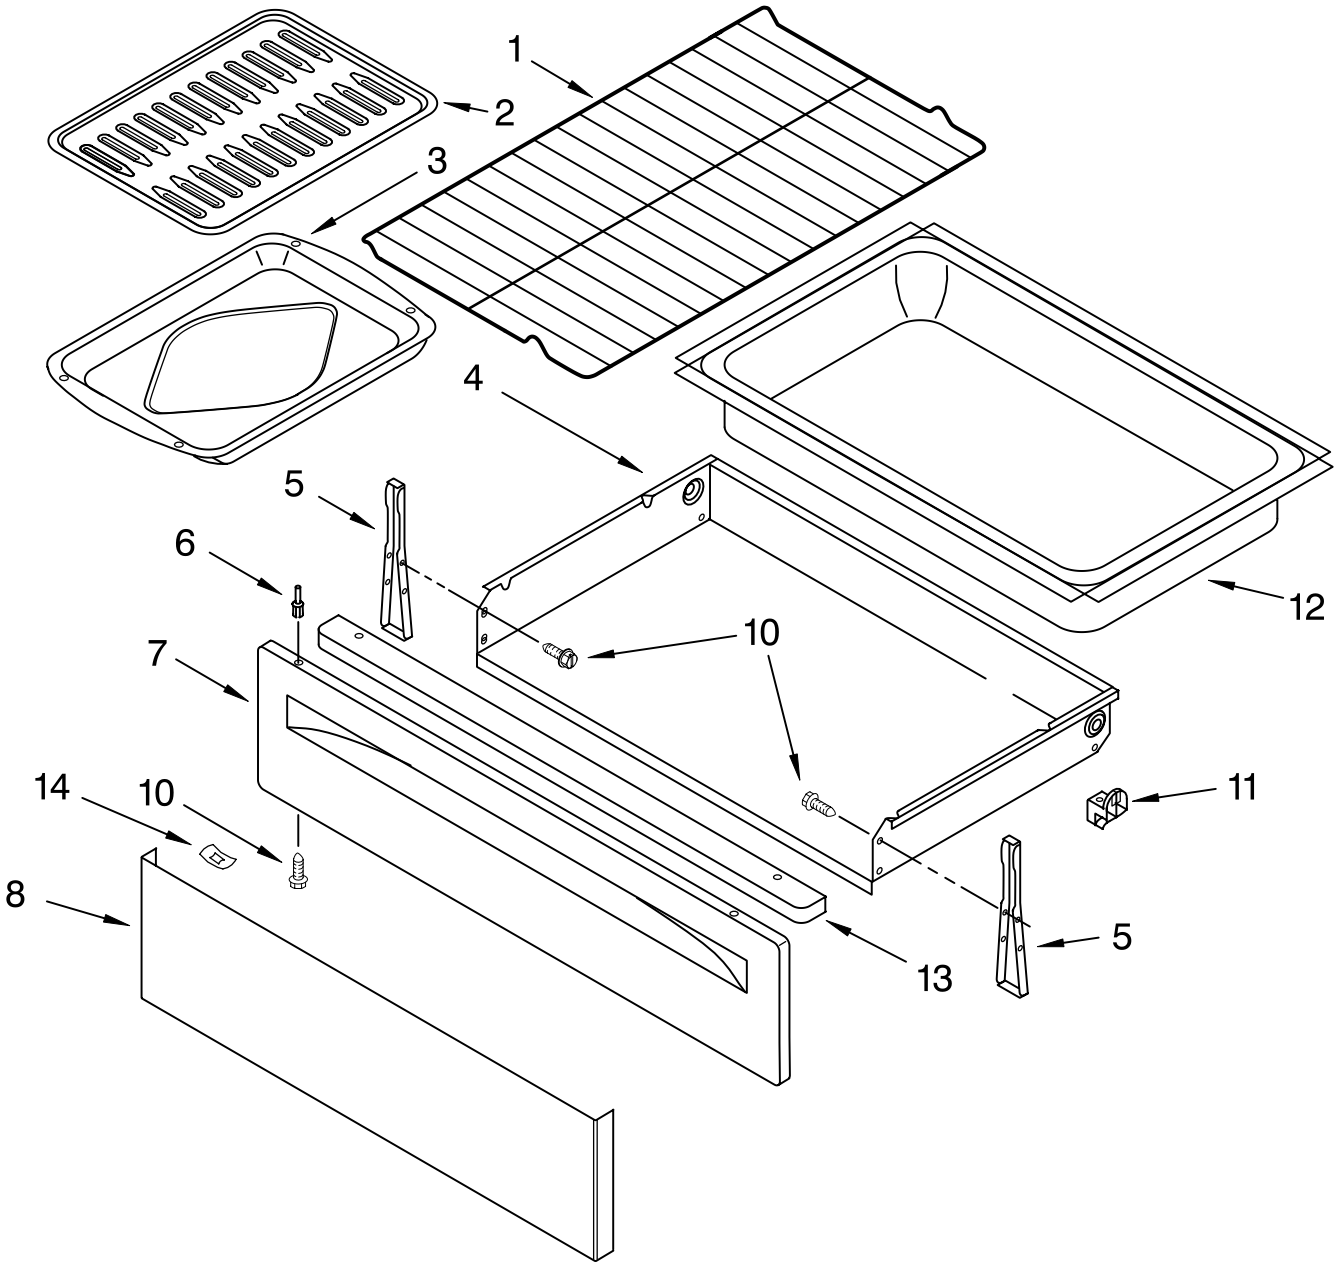

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272605	Drawer, Storage
5	9758200	Bracket, Drawer(2)

Illus. No.	Part No.	DESCRIPTION
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
7		Panel, Drawer Frnt
	8053339	White
	8053341	Black
	8272501	Biscuit

Illus. No.	Part No.	DESCRIPTION
8	9755798	Panel, Stainless
10	3196168	Screw
11	8053334	Spacer, Glide
12	8272311	Liner, Drawer
13	9757237	Handle, Drawer
14	9781235	Clip, Speed

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RF378LXPQ1, RF378LXPB1, RF378LXPT1, RF378LXPS1
(Designer White) (Black) (Designer Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION

Parts Not Illustrated and Optional Parts (Not Included)

SPLICING WIRES−−25FT. LENGTH

	242828	Wire, Black 12 Ga. 150° c
	242821	Wire, Blue 14 Ga. 150°c
	242822	Wire, Brown 14 Ga. 150°c
	242830	Wire, Brown 14 Ga. 200°c
	242823	Wire, Green 14 Ga. 150°c
	242824	Wire, Orange 14 Ga. 150°c
	242825	Wire, Red 14 Ga. 150°c
	242831	Wire, Red 14 Ga. 200°c
	242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

	799832	Kit, Porcelain Repair (White)
	242756	Touch−Up Self−Clean(1/2 Pt)
	261582	Grease

INSULATION

	261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2−1/2"
	313660	Clip, Ground Wire x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

	72017	White
	4392899	Biscuit
	511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

	350930	White
	4392901	Biscuit
	285006	Superior Black
	206922	Primer (White)

PAINT, BULK (1 qt.)

	799344	White (Uncut)
	4392900	Biscuit (Uncut)

ACCESSORY PARTS

	241430	Foil, Aluminum Oven (18" x 25')
	3191048	Cleaner, Glass

ANTI−TIP KIT

	9757976	Anti−Tip Kit

WIRING HARNESS PARTS

	9759775	Harness, Wire (Cooktop Left)
	9759774	Harness, Wire (Cooktop Right)
	9759003	Harness, Oven
	9758180	Harness, Wire (Sensor/Dr Switch)
	8523279	Wire, Ground
	8524132	Shield, Wiring
	313660	Clip, Ground Wire
	3196173	Screw
	3196154	Screw, Ground

Miscellaneous

	3196897	Pin Kit−Dr Removal